

MONTE RINGS ANVI SNING

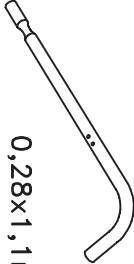
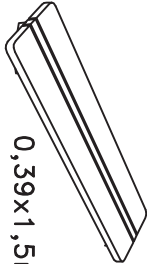

Monteringsanvisning

Soffa Rörkröken

8037035



proffs på
utemiljö

TYPE	521460	521500
 0,28x1,1m	521671-01 (2x)	521671-01 (2x)
 0,39x1,5m	521470	521450
 0,08x1,5m	521469-01	521451-01



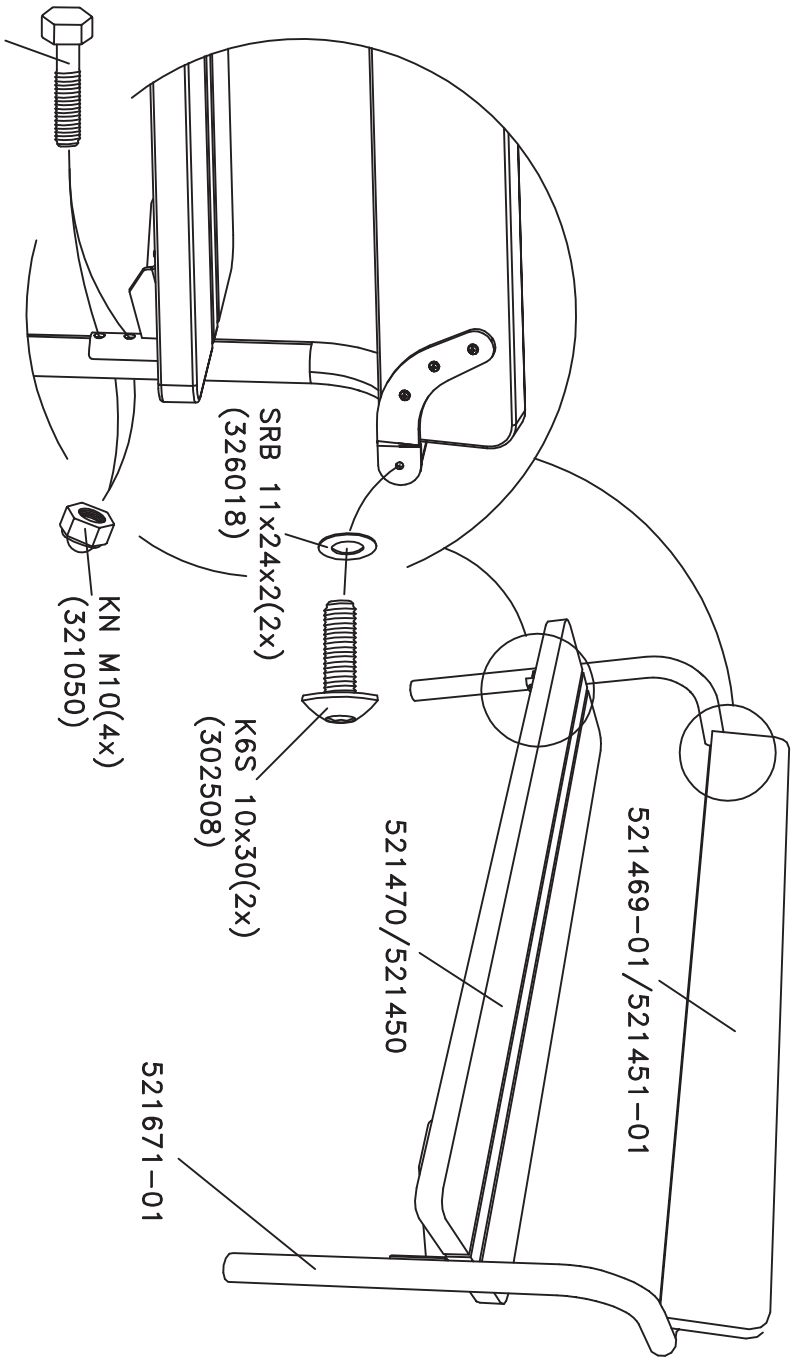
Varje säsong
Every season
Jedes Jahr
Chaque saison



Varje vecka
Every week
Jede Woche
Chaque semaine



0,25h



M6S 10x65(4x)
(302215)

SRB 11x24x2(2x)
(326018)


KN M10(4x)
(321050)


K6S 10x30(2x)
(302508)

521470/521450

521469-01/521451-01

521671-01

 2x24h

 \geq C20/25
S1-S3
(EN 206-1)

101

